

---

# WebCAM 8051 User's Guide

---

## Table of Contents

1. Component
2. How to configure hardware
3. How to install firmware
4. How to install PC Application
5. How to use
6. FAQ




 
 
---


## 1. Component

Item	Quantity	Remarks
8051EVB	1	Rev 1.2
WebCAM Board	1	Rev 2.0
UTP Cable	1	Cross Cable
Serial Cable	1	Cross Cable
9V Adapter	1	Power Adapter
LCD	1	16*2 Character LCD
CD	1	Remote Controller CD


## 2. How to configure hardware?

### ① Configure WebCAM Board's Jumper


	Pin No.		
JP1	Open		
JP2	1	2	
JP3	1	2	
CN1	Open		
CN2	Open		
CN3	1	2	3
CN4	1	2	3

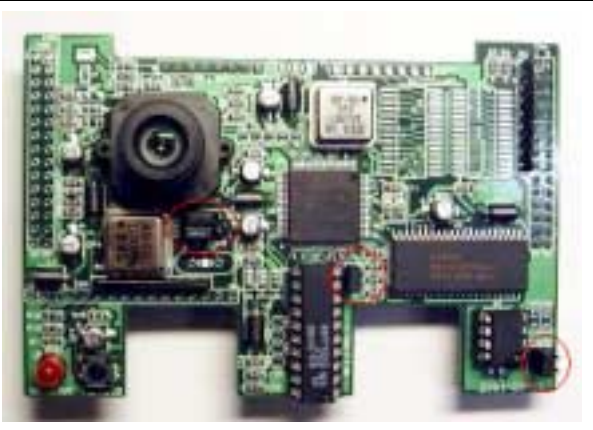A photograph of a green WebCAM Board. It features a lens in the upper left, a central microcontroller, and various connectors and components. The board is populated with several integrated circuits, capacitors, and resistors.


### ② Connect WebCAM Board's **CN6** to 8051EVB's **CN6**. Connect WebCAM Board's **CH1** to 8051EVB's **CH1**.

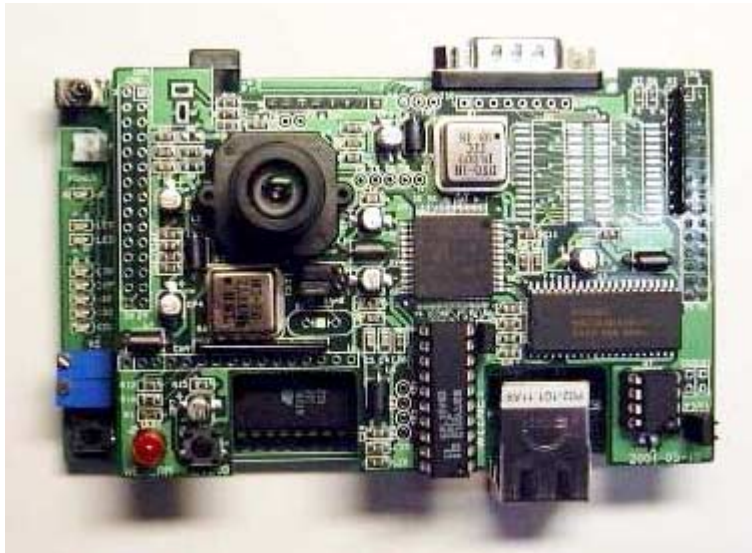


- ③ Connect 8051EVB's P1 to PC with Serial Cable.

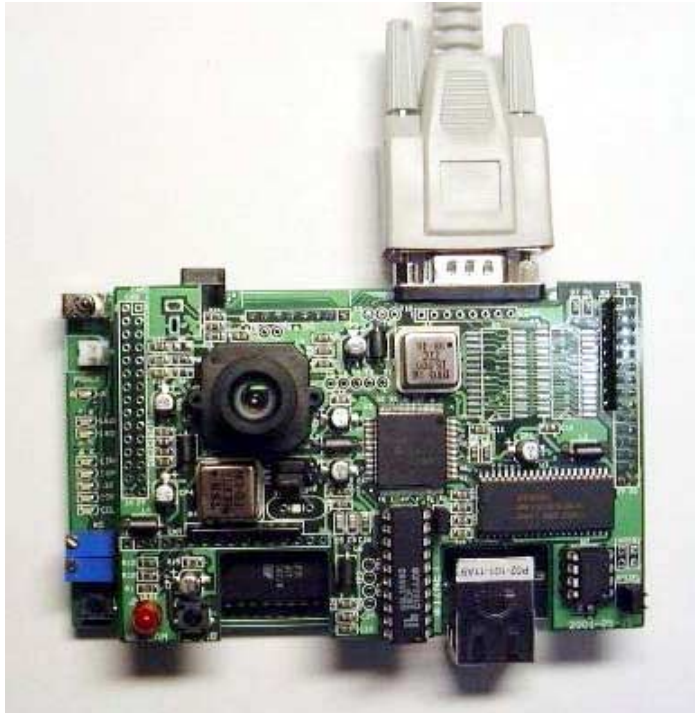

- ④ Connect 8051EVB's U11 to PC's NIC(Network Interface Card, LAN card) with UTP cable(Cross cable)

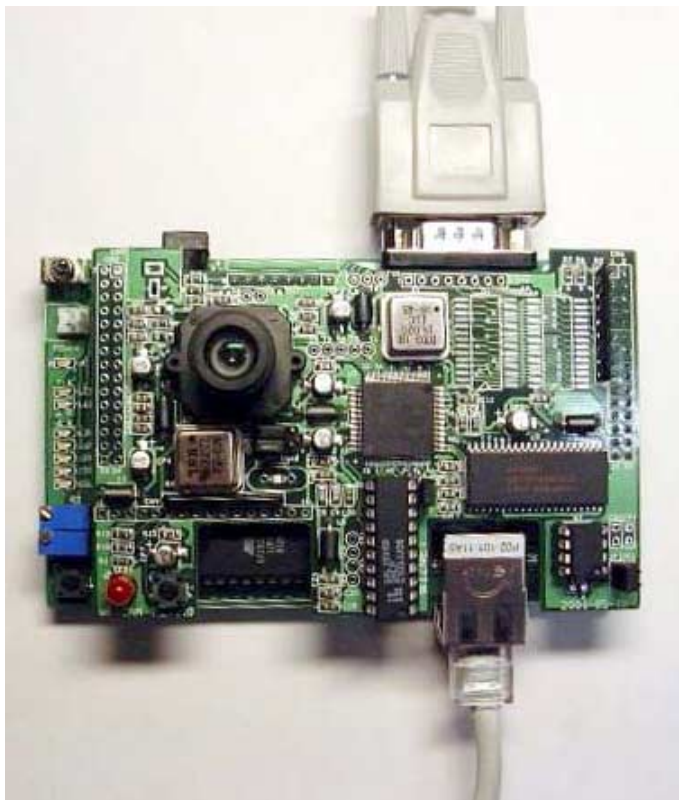

- 
- ⑤ Connect 9V Adapter to 8051EVB's CON1.

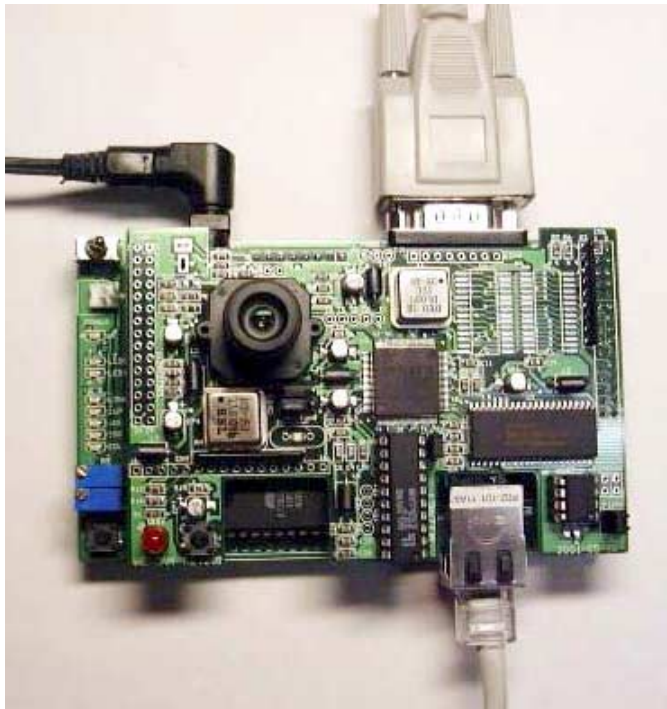

### 3. How to install Firmware?

- ① How to write for WebCAM Board's PAL
  - A. Connect ROM writer and then execute ROM writing program.
  - B. Select ATMEL as PLD's provider and select ATF16V8B/BQ as part number.
  - C. Separate PAL in Webcam Board and plug it in ROM writer.
  - D. Select WpalWebCAM\_module.jed in CD and Load.
  - E. Write it on the PAL.
  - F. Plug written PAL in WebCAM Board.
  
- ② ROM Version (In case that there is a ROM Writer)
  - A. Connect ROM writer and execute ROM writing program.
  - B. Select ATMEL as Flash memory's provider and select AT29C256 as part number.
  - C. Separate Flash **memory(AT29C256)** from 8051EVB and plug it in ROM writer.
  - D. Select WSoftwareWBoardWFlashWWebCAMWebCAM.hex in CD and Load it as HEX.
  - E. Write it on the Flash.
  - F. Plug written Flash to 8051EVB.
  - G. Put a cap on 2-3 of CN2 on 8051EVB.
  - H. Turn on the 8051EVB(**S2**).

(~~1-2~~ On usual, Step ①, ② are supported as it's set.)

---


#### 4. How to install PC Application?

- ① How to install IJLView Application
  - A. Double-click WSoftwareWPCWWebcamWwebcam.exe file in CD.
  - B. Set path to install program and click next.
  - C. Set group and click next.
  - D. Start to install.
  
- ② How to set Null Modem program
  - A. Execute Hyper Terminal on PC. set name to connect optional and click next.
  - B. Select COM Port connected into PC in Null Modem and click next.
  - C. Set as follows.
    - bit/sec:9600
    - Data bit:8
    - Parity:None
    - Stop bit:1
  - D. Flow control:None




## 5. How to use?


- ① After step 2. 3. 4 , run IJLView program on PC.

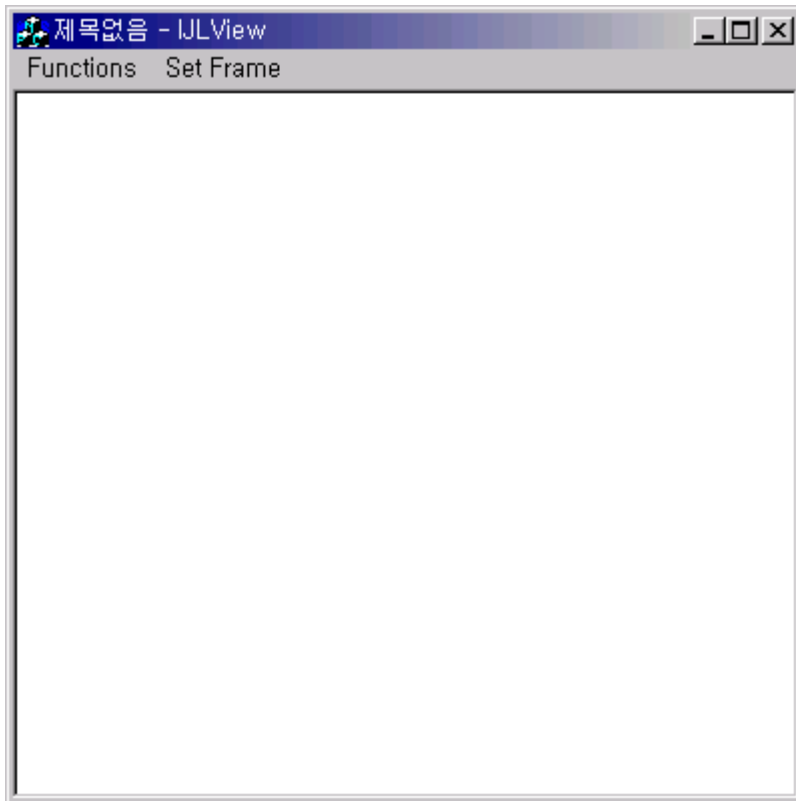

- ② Select "Connect" in Functions Tap and input "211.171.137.38", click "Connect" button.

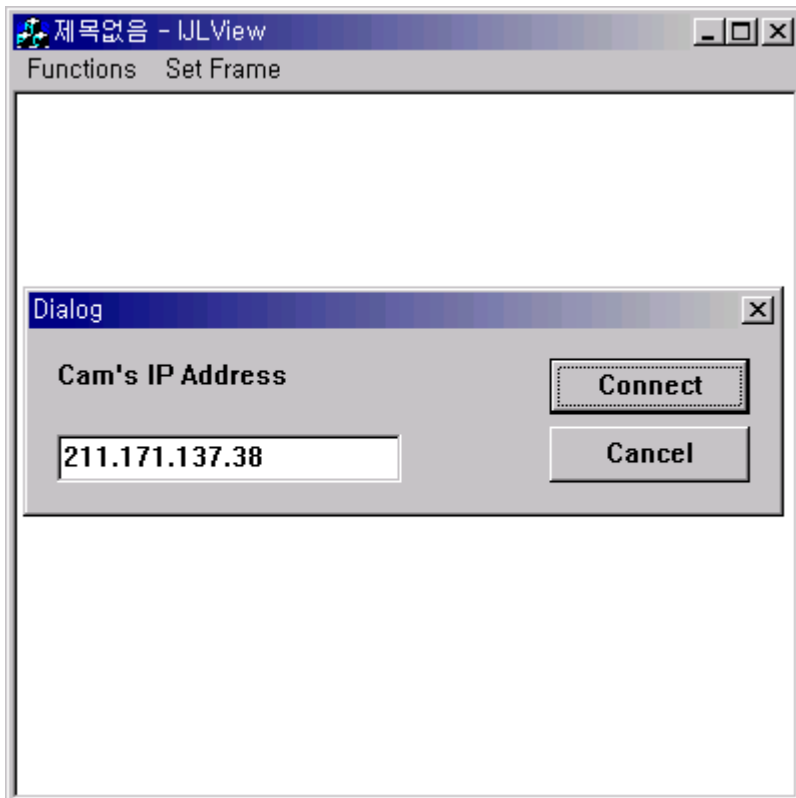


- ③ Select Frame number(2FPS or 5FPS) in Set Frame Tap.

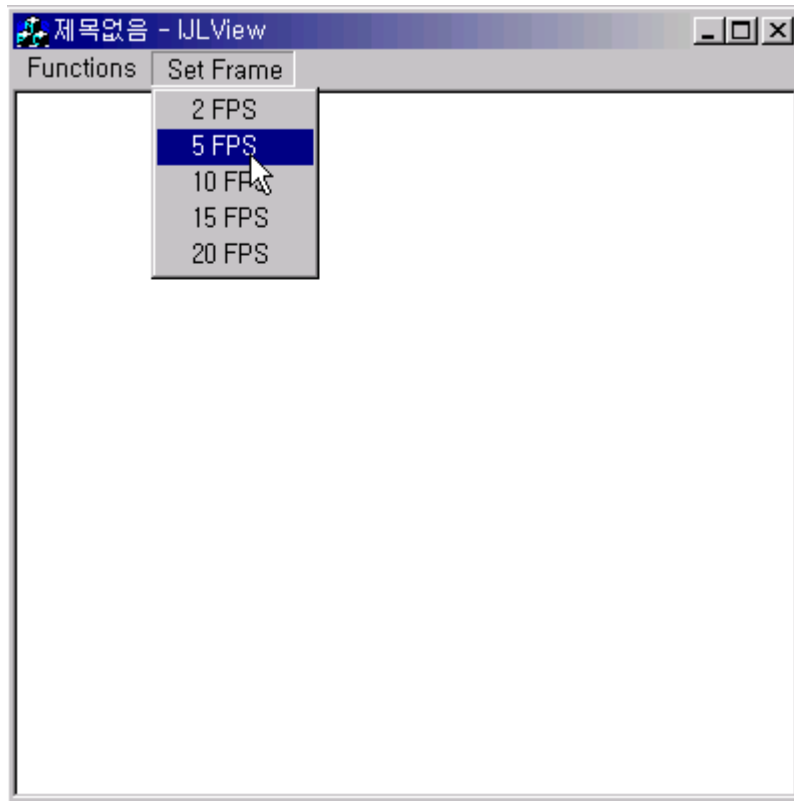


- ④ Through image on IJLView Program, test WebCAM.



- ⑤ To finish test, select "Disconnect" in Functions Tap.

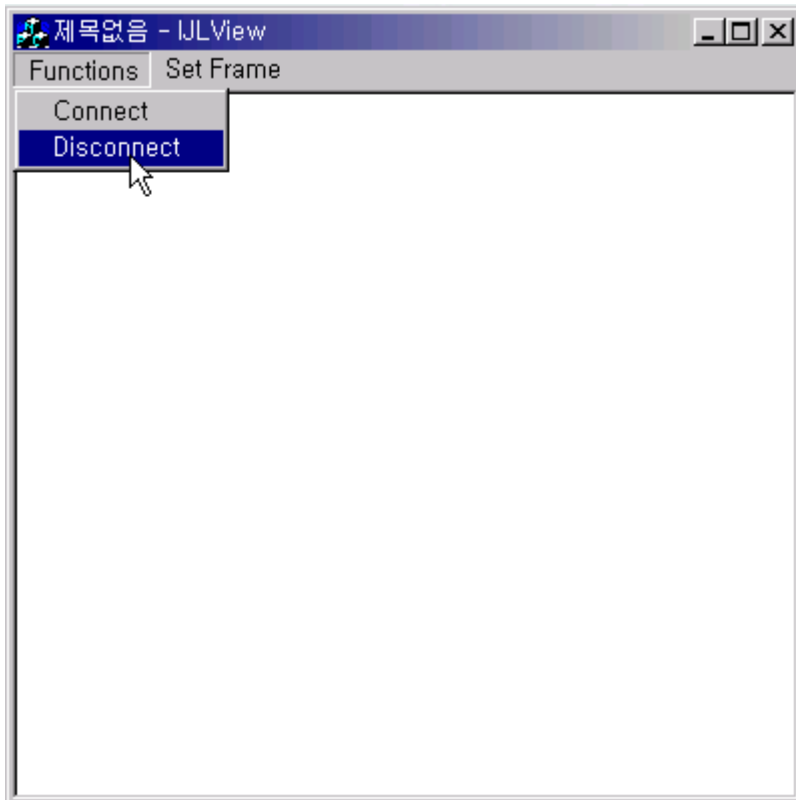

- ⑥ (option) If it's connected into 8051EVB with Serial Cable and set to can monitor through Null Modem program, Reset and Press capital "C", change IP, Subnet Mask, Gateway, MAC address.

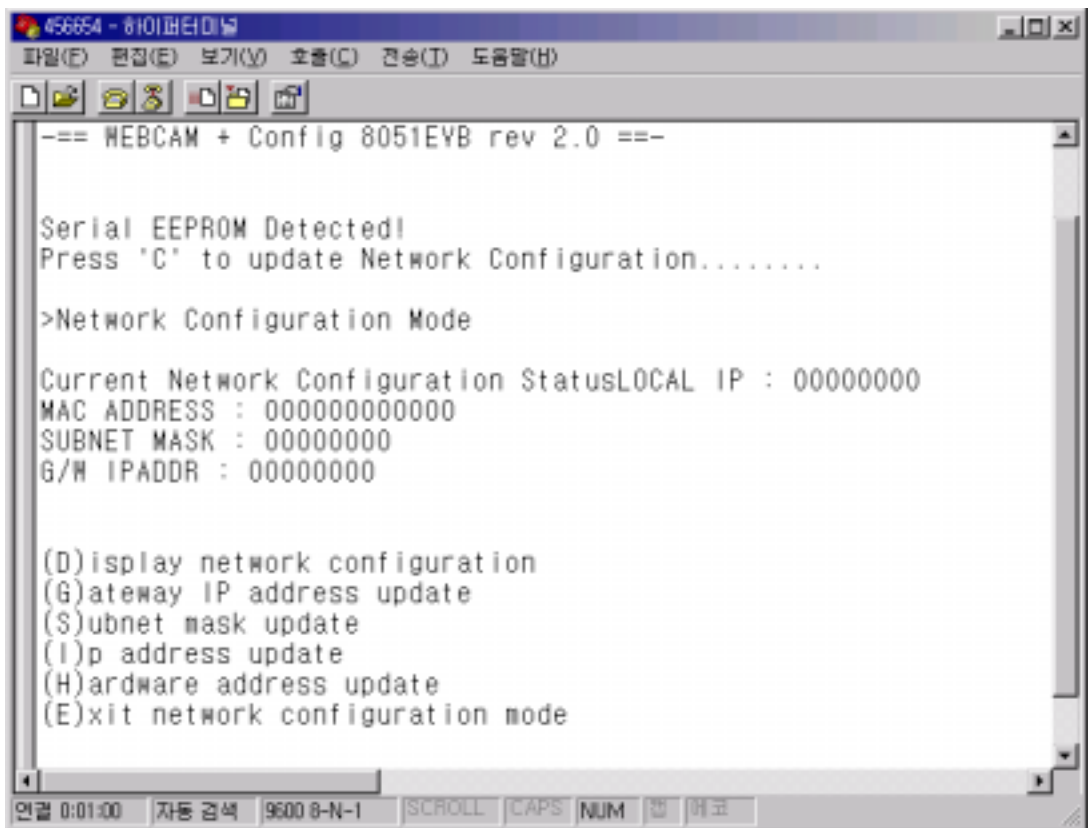

## 6. FAQ

- ① Timeout occurs on Ping execution for testing Ethernet connection.
  - > Check whether the UTP cable is correctly connected to U11.
  - > Provided UTP cable is cross cable for direct connection. So you cannot use it for connecting to Hub. Instead of it, please use normal UTP cable.
  - > If above all two steps are correct, turn on the 3<sup>rd</sup> switch(duplex) of S3 in 8051EVB.
  
- ② There is no image in IJLView program's window.
  - > Check the Jumper in WebCAM board
  - > If Jumper's configuration is correct, reset WebCAM board first and reset 8051EVB.And then check it again.
  
- ③ Occurs error message, "Fail to Getting JPEG. Operation will be stopped" after select Set Frame in IJLView program.
  - > When you connect IJLView, please check IP address is same as "211.171.137.38".
  - > Reset WebCAM board first and reset 8051EVB.And then check it again..
  
- ④ Cannot download program with Serial cable.
  - > Check connection of Serial Cable.
  - > Check configuration of Null modem program.
  - > Check putting a cap on 1-2 of CN2 on 8051EVB.